



1. Get the latest software for MB8000 from [Top Global](#). Rename the software to FILENAME and put it in a folder, for example, C:\firmware.  
If the firmware you get from Top Global is a .zip file, please extract it.
2. Download TFTP server [3cdv2r10.zip](#)(Click to download) from the Internet.
3. Install this software.

## Setup TFTP service to upgrade MB8000 software

1. Change your IP address to 172.16.0.2.
2. Run the TFTP server and click the “Configure TFTP Server”.

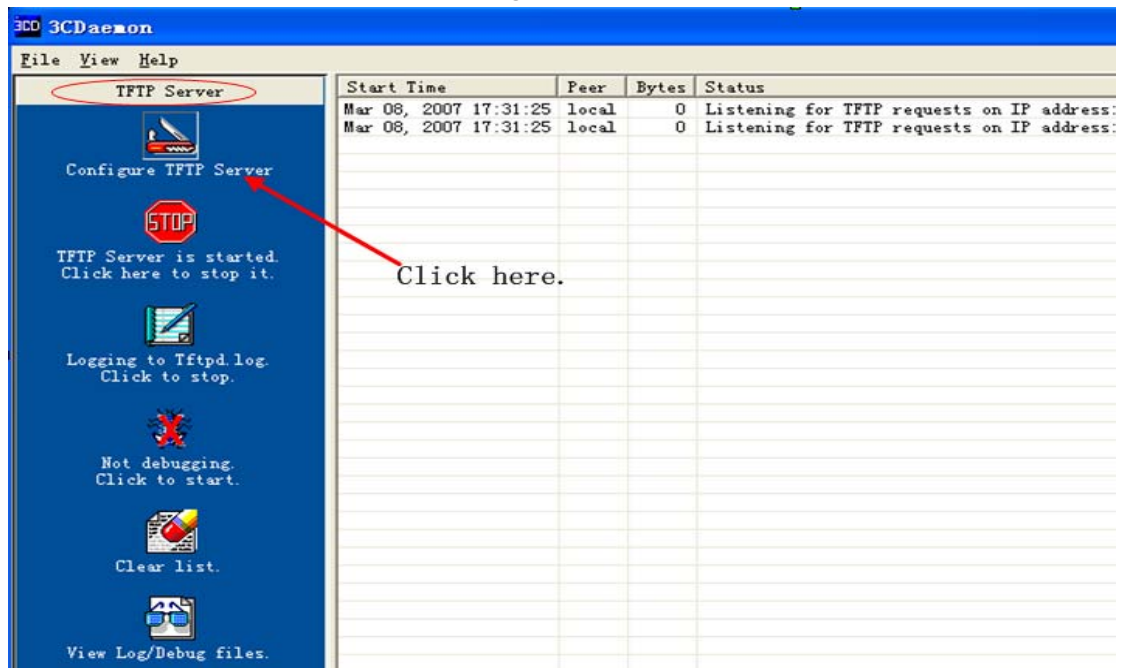

3. And then input the path where you put the firmware in “Upload/Download” field.

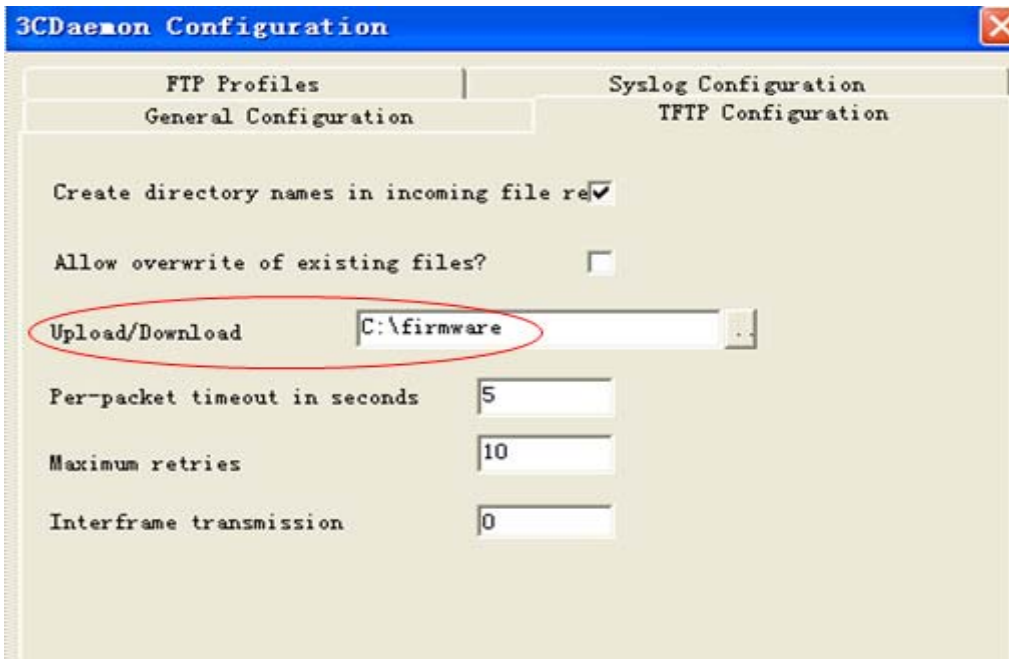

4. Click “OK” to save.