



1. Get the latest software for MB8000 from [Top Global](#) or support@topglobalusa.com (please also provide your MB8000 unit's SN (Serial Number) and the current software version on the "Status" page).
2. Rename the software to FILENAME and put it in a folder, for example, C:\firmware.
If the firmware you get from Top Global is a .zip file, please extract it first.
3. Download TFTP server [3cdv2r10.zip](#)(Click to download) from the Internet.
4. Install this software on your PC or laptop.

Setup TFTP service to Force Rebad MB8000

1. Configure your PC/laptop's IP address to **10.0.0.2**.
2. Run the TFTP server and click the "Configure TFTP Server".

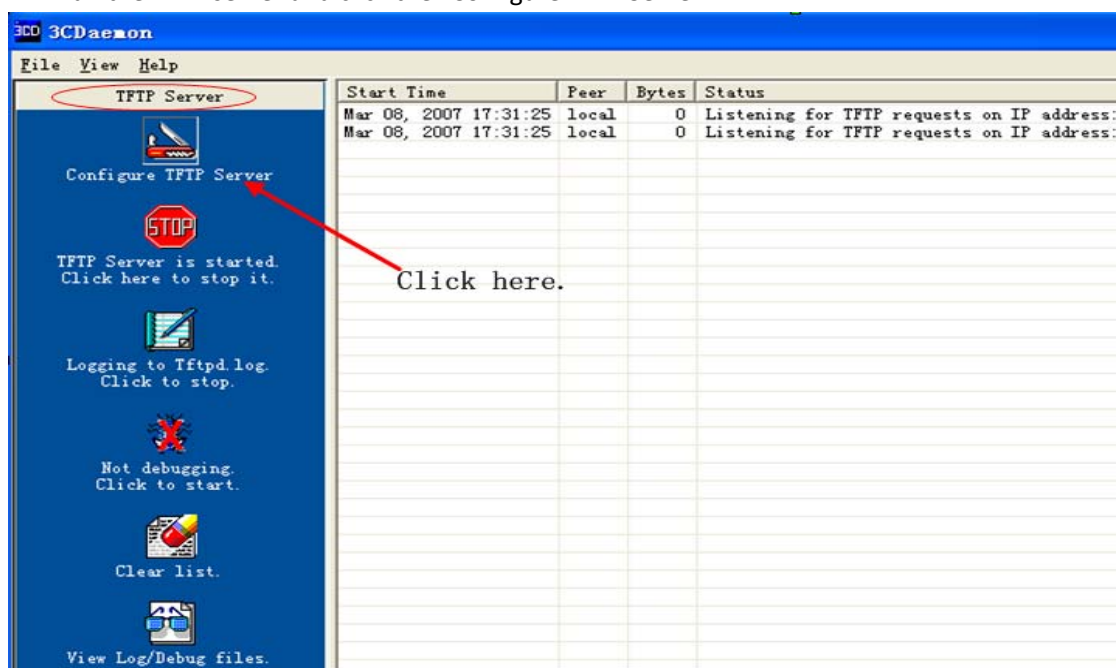

3. And then input the path where you put the firmware in "Upload/Download" field.

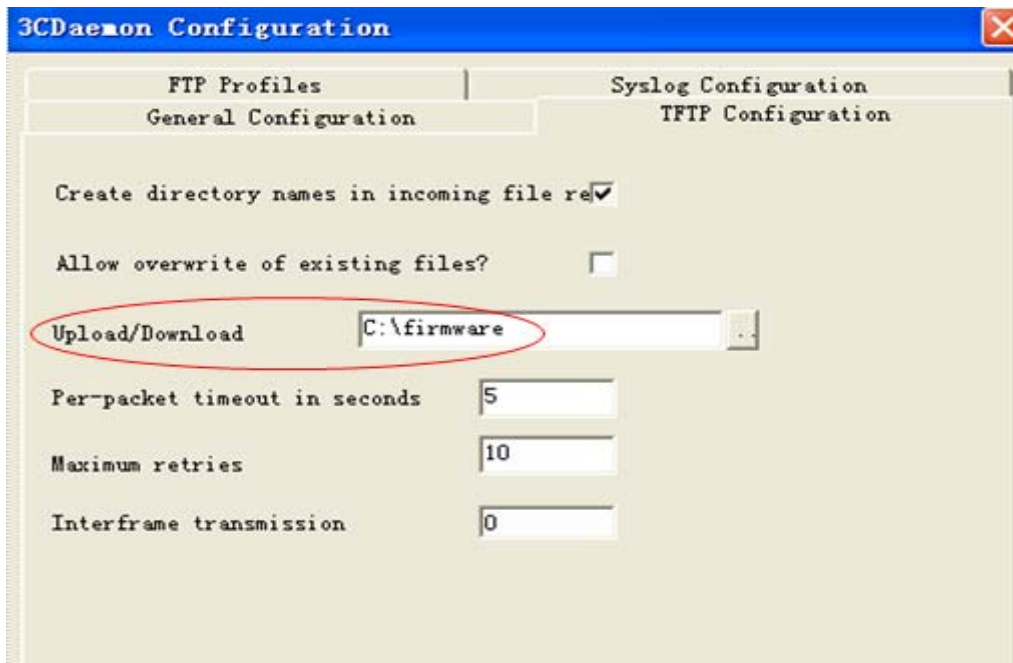

4. Click "OK" to save.
5. After the force reload procedure finished, you may change your PC/Laptop's IP address back to 172.16.0.xxx or dynamic IP setting.